




## Bosch 2000/3000 series alarm instructions

### Arming/Disarming your system

	AWAY mode Arm all zones when you leave the house	0 #AWAY or "user code" #AWAY
	STAY mode To arm panel in night arming mode. Zones will be excluded for bedrooms, hallway etc	0 *STAY or "user code" *STAY
	DISARM To disarm the panel from either AWAY or STAY mode	"user code" #AWAY

### Adding/changing codes

To do this you must have either a master code or installer code.  
There can be up to 32 user codes and 32 radio keys in the 2000/3000 series.

Changing codes.	Press "master code" then 1 #AWAY Select your user location (1-32) #AWAY e.g. to change user 1 press "1 #AWAY" Punch in your "new code" then press #AWAY
Deleting codes.	Press "master code" then 1 #AWAY Select your user location (2-32) #AWAY (be sure to <u>NOT</u> delete the first code) press #AWAY then *STAY
Adding a radio key (B810 receiver only)	Press "master code" then 1 #AWAY Select your user location (301-332) then press #AWAY and #AWAY again press any button on the new keyfob then press #AWAY and #AWAY again

### Fault indicator



The exclamation mark indicates a fault with the alarm system.

Press and hold the "5" button for 2 seconds to check the fault category as displayed on the keypad

	FAULT (2 <sup>nd</sup> number displayed on keypad)	REMEDY
If "1" appears press 1 on the keypad.	1 low battery 2 date and time 3 RF receiver fail 4 output 1-3 fail 5 telephone line fail 7 power supply fail 8 onboard tamper	Replace battery, test charge circuit Instructions below Radio equipment failed. Call ASG Output failed. Call ASG Technician required. Call ASG Possible short. Call ASG Ensure main panel lid is closed.
If "2" appears press 2 on the keypad.	Zones 1-8 will display to show which zone has a low battery	Replace battery in detector
If "3" appears press 3 on the keypad.	Zones 1-8 tamper alarm	Make sure casing on detector is sealed
If "4" appears press 4 on the keypad.	Zones 1-8 not triggering	Check battery. Possibly faulty detector
If "6" appears press 6 on the keypad.	5 or 6 indicates IP module fail	Call ASG, panel will not be communicating
If "8" appears press 8 on the keypad.	1-16 keyfob low battery	Replace keyfob battery

### Setting the date and time

Any time the system has had power removed it will need the date & time set or an error will appear on the keypad

Press "master code" then 6 #AWAY
Key in the date and time as "DD MM YY HH MM" then press #AWAY